 
 
 
 
 
 
 
 
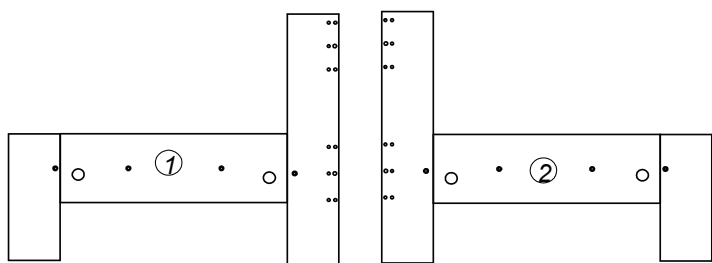 





Montážní návod










Rev. 21.11.2024



Rozkládací postel



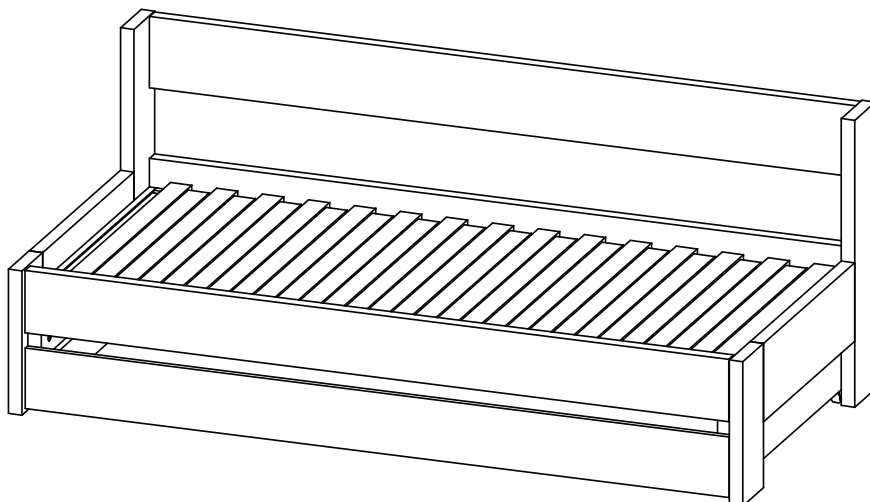


          
 
 
Tento montážní návod platí i pro postele s pravou nebo levou loketní opěrkou.

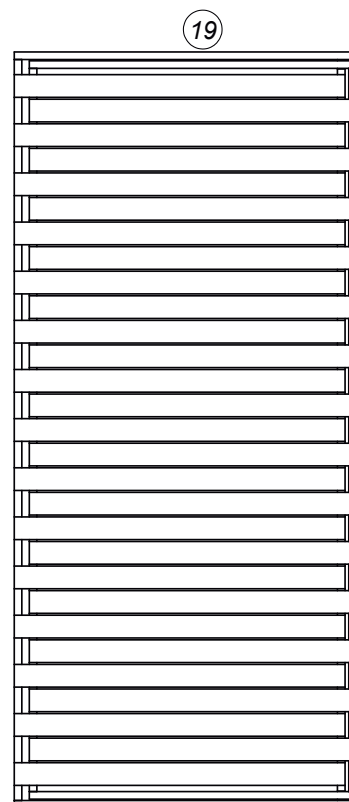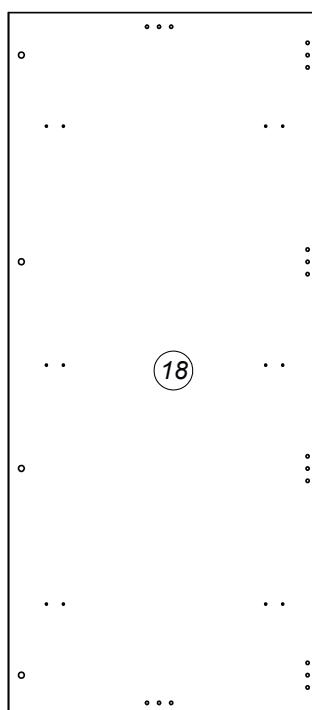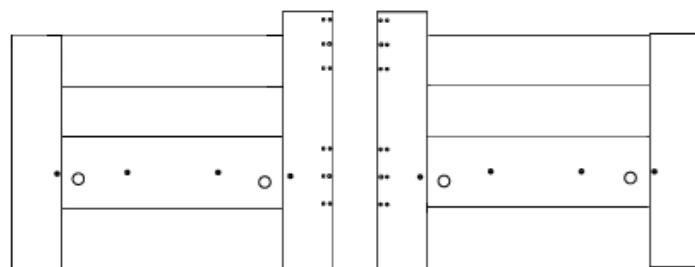

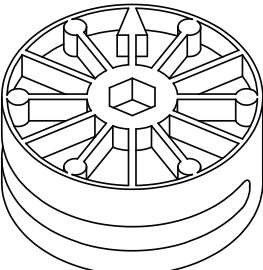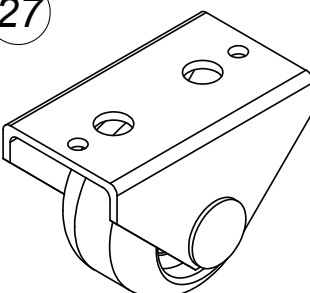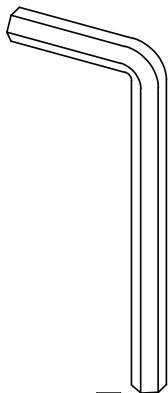
20  66x	21  M6x14 18x	22  M8x24 4x	23  4x	24  4x	
25  28x	26  15/19 28x	27  10x Ø 43	28  4x30 8x	29  3,5x16 12x	30  M6x40 18x
			 4	 6	 8

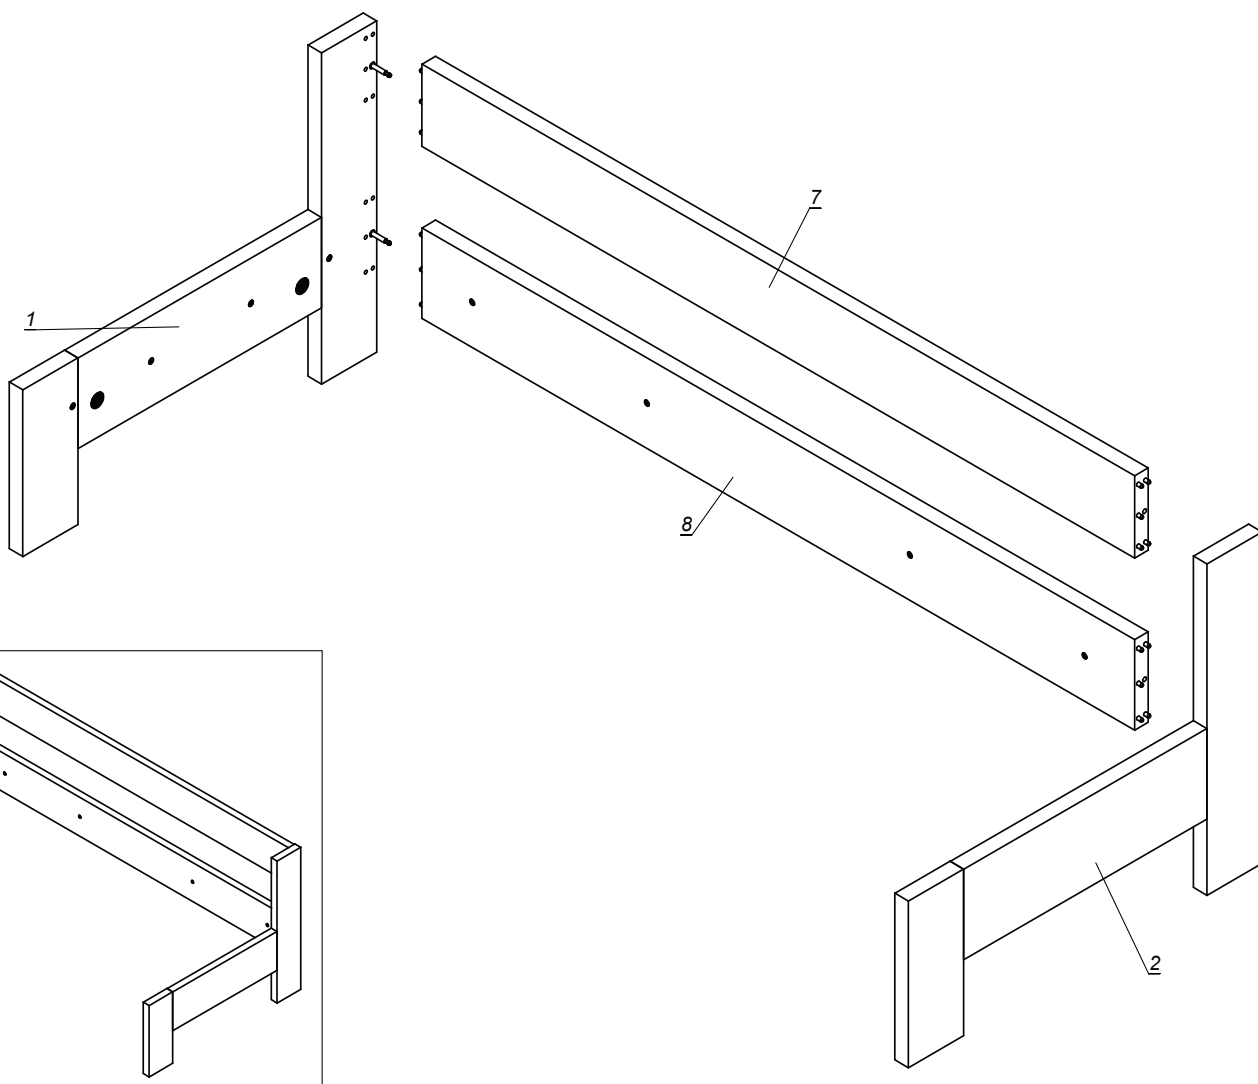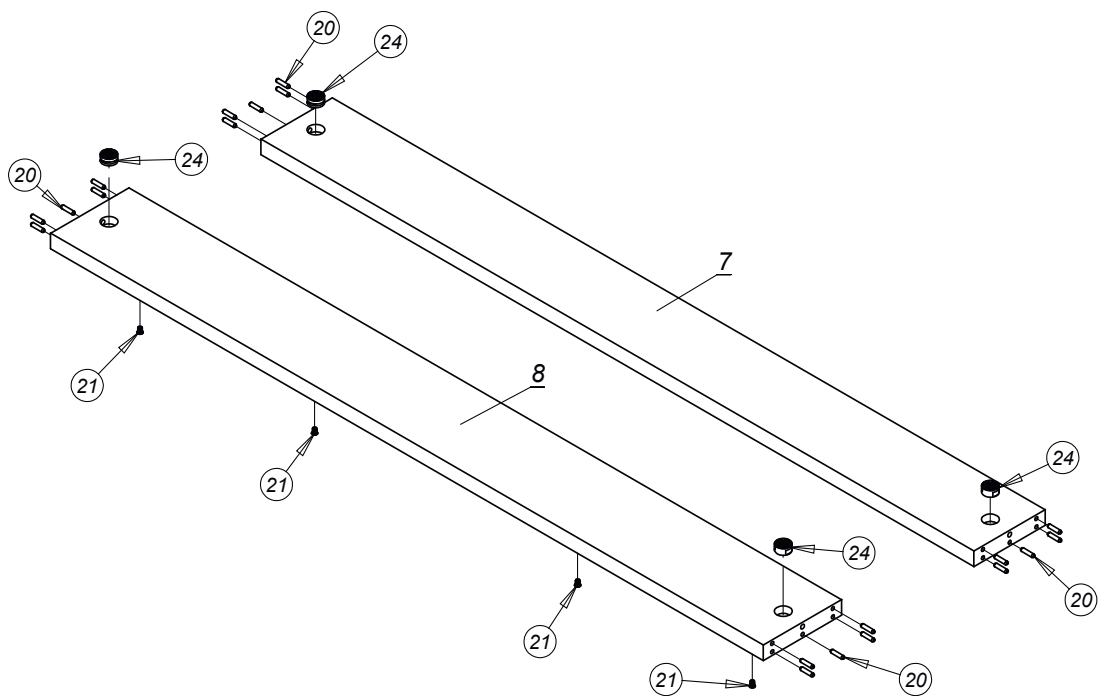  

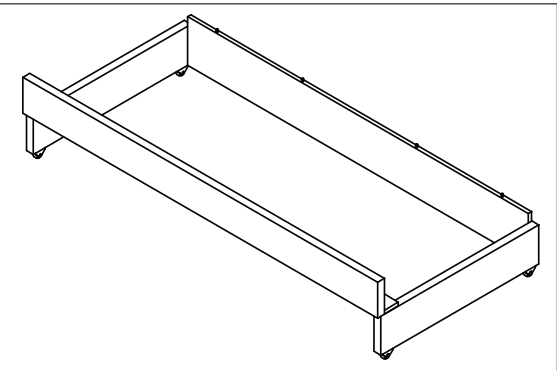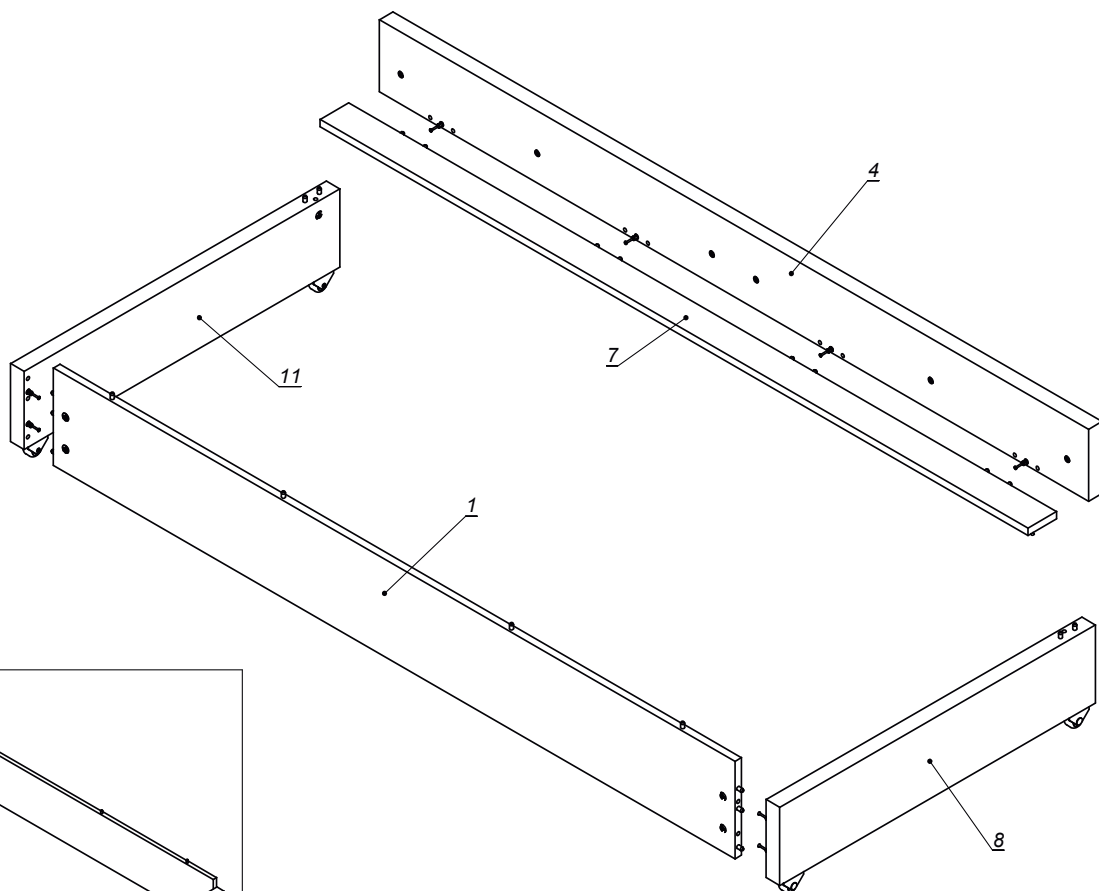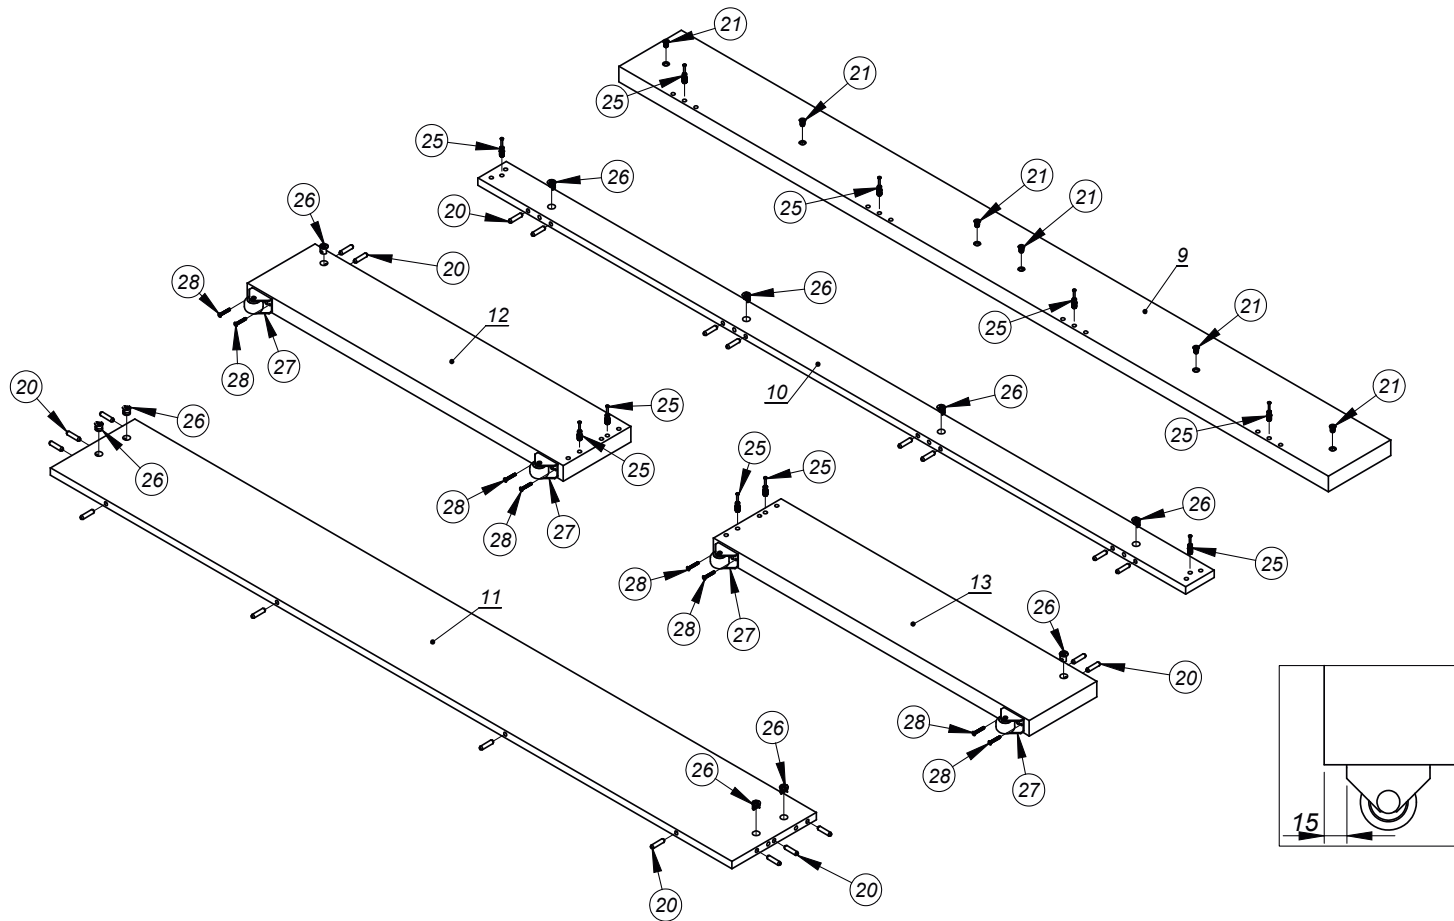   


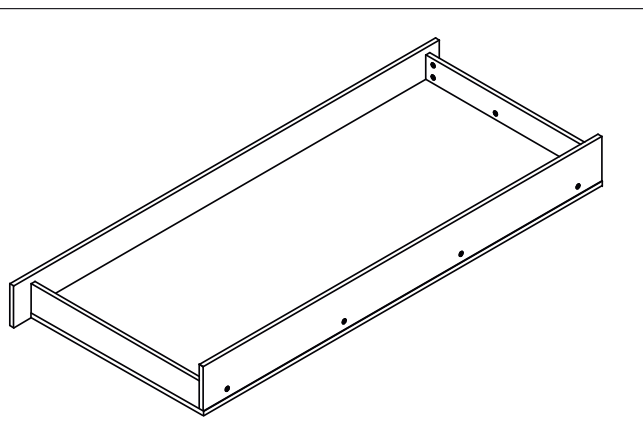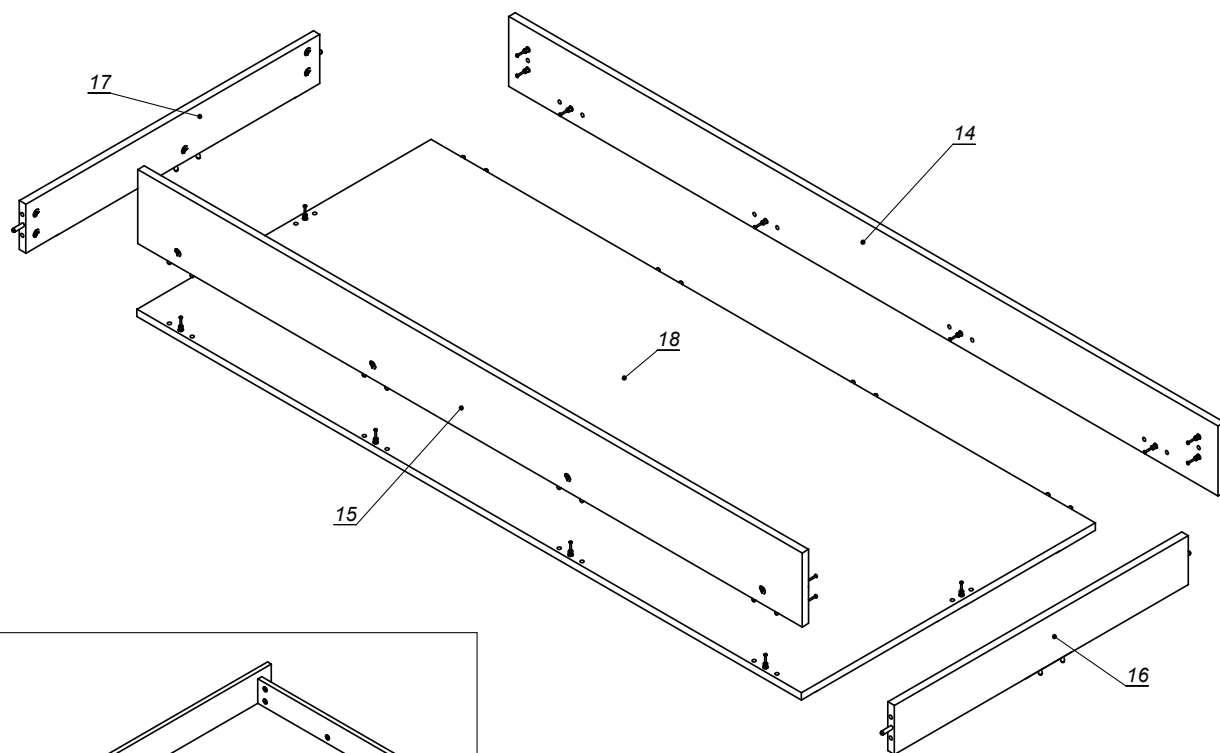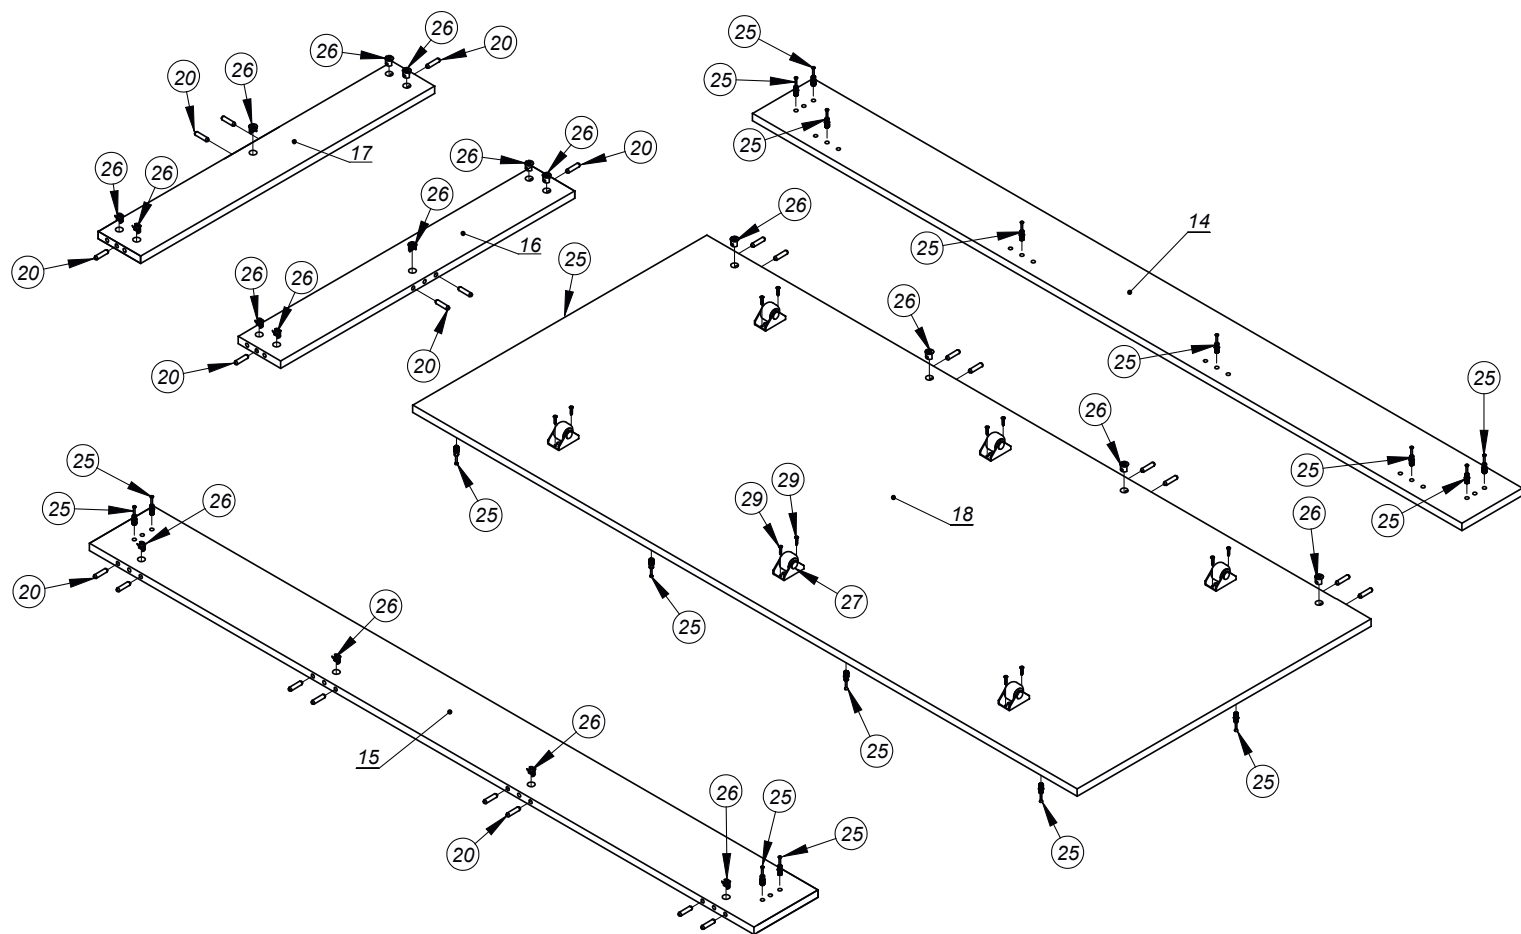   


A

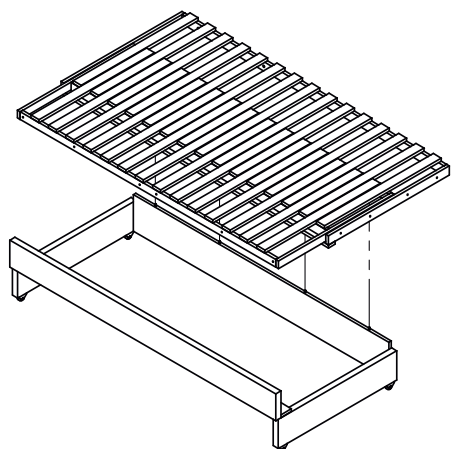 


B

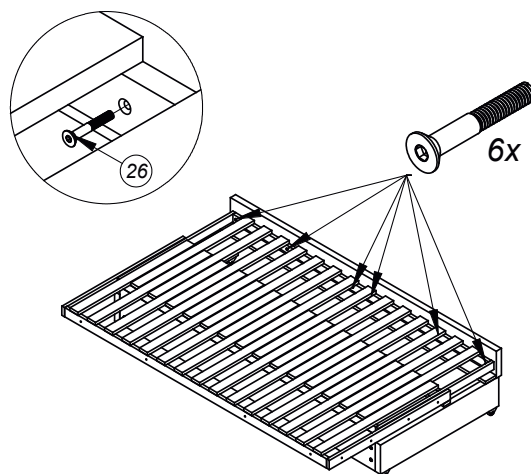 


C

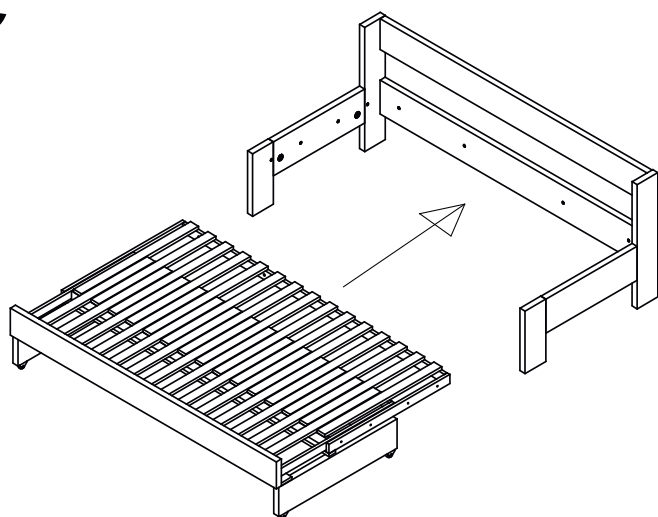 

D

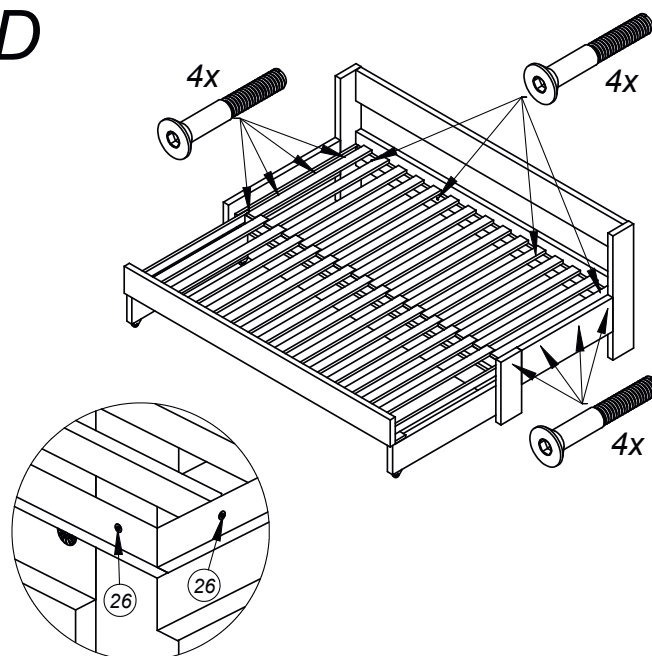 

E

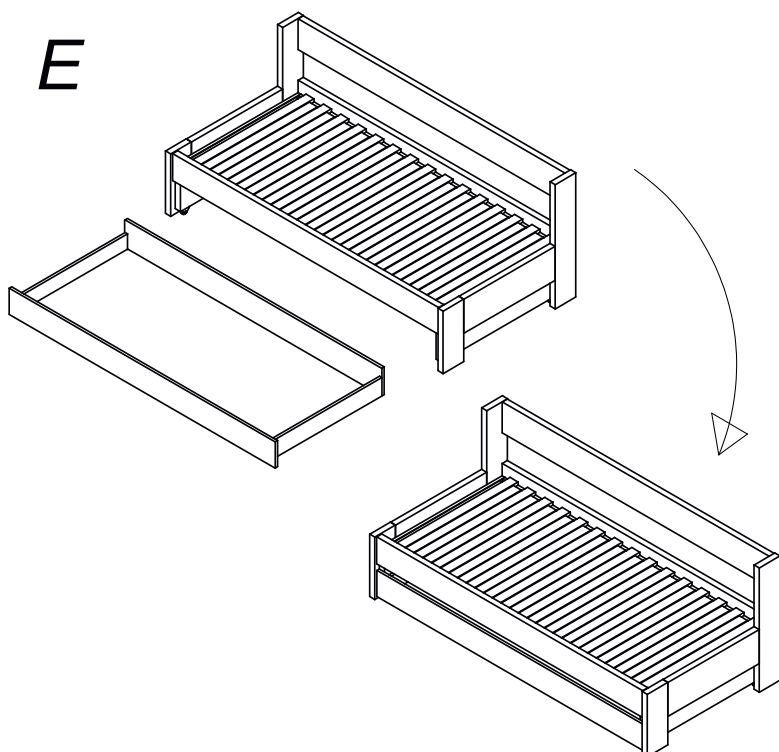 

F

